



4K Ultra HD HDBaseT™

Multi-Format 2x1 Auto-Switching Sender w/ Scaler
Receiver w/ Audio-De-Embedder and POH

EXT-UHDV-HBTL5-TX

EXT-UHDA-HBTL-RX



User Manual
Version A1

Important Safety Instructions

1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this product near water.
6. Clean only with a dry cloth.
7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not install or place this product near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
11. Only use attachments/accessories specified by the manufacturer.
12. To reduce the risk of electric shock and/or damage to this product, never handle or touch this unit or power cord if your hands are wet or damp. Do not expose this product to rain or moisture.
13. Unplug this apparatus during lightning storms or when unused for long periods of time.
14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
15. Batteries that may be included with this product and/or accessories should never be exposed to open flame or excessive heat. Always dispose of used batteries according to the instructions.

Warranty Information

For the latest warranty coverage information, refer to the Warranty and Return Policy under the Connect section of the Gefen website at <http://www.gefen.com/connect/warranty-and-return-policy>

Technical Support

1-707-283-5900 1-800-472-5555
8:00 AM to 5:00 PM Monday - Friday, Pacific Time

Email

support@gefen.com

Web

<http://www.gefen.com>

Mailing Address

Gefen
Nortek Security & Control, LLC
c/o Customer Service
1800 S McDowell Blvd
Petaluma, CA 94954 USA

© 2018 Nortek Security & Control, LLC. All Rights Reserved.

All trademarks are the property of their respective owners.

Gefen and Nortek Security & Control, LLC reserve the right to make changes in the hardware, packaging, and any accompanying documentation without prior notice.

Important

- While Unshielded (UTP) CAT-5e is usually adequate, shielded (STP) CAT-6A is recommended. Shielded (STP) CAT-5e or unshielded (UTP) CAT-5e or CAT-6A may be acceptable depending on cable quality. Care should always be given to keep these cables away from power lines and other sources of electromagnetic interference.
- Cable quality is critical when handling 4K HDMI signals. We highly recommend Gefen HDMI cables. They have been designed and tested to reliably transport the the full throughput of HDMI standard.
- Power Over HDBaseT (POH) is a standard HDBaseT™ implementation of PoE that provides power from one device to the other over the link cable. This Sender and Receiver units comply with the POH standard. The EXT-UHDV-HBTL-TX Sender can power the EXT-UHDA-HBTL-RX the Receiver, or the EXT-UHDA-HBTL-RX Receiver unit can power the EXT-UHDV-HBTL-TX Sender.
- The EXT-UHDV-HBTL-TX and the EXT-UHDA-HBT-RX, when used together, can pass both HDCP 2.2 and 1.4.
- The information in this manual has been carefully checked and is believed to be accurate. However, Gefen and Core Brands, LLC assume no responsibility for any inaccuracies that may be contained in this manual. In no event will Gefen and Core Brands, LLC be liable for direct, indirect, special, incidental, or consequential damages resulting from any defect or omission in this manual.
- All information contained herein is subject to change without notice.



This product may use software that is subject to open source licenses, including one or more of the General Public License Version 2 and Version 2.1, Lesser General Public License Version 2.1 and Version 3, BSD, and BSD-style licenses. Distribution and use of this product is subject to the license terms and limitations of liability provided in those licenses. Specific license terms and Copyright Notifications are provided in the source code.

For three years from date of activation of this product, any party may request, and we will supply, for software covered by an applicable license (e.g. GPL or LGPL), a complete machine-readable copy of the corresponding open source code on a medium customarily used for software interchange. The following software and libraries are included with this product and subject to their respective open source licenses:

- lwIP
- jQuery

lwIP is licenced under the BSD licence:

Copyright (c) 2001-2004 Swedish Institute of Computer Science.
All rights reserved.

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

1. Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.
2. Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.
3. The name of the author may not be used to endorse or promote products derived from this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED BY THE AUTHOR ``AS IS'' AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE AUTHOR BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

EXT-UHDV-HBTL5-TX*

- HDMI Input supports 600 MHz TMDS Clock and data throughput of up to 18 Gbps (4K Ultra HD (3840 x 2160) or 4K Cinema-DCI (4096 x 2160) up to 60 Hz, 4:4:4)
- Extension system supports 340 MHz TMDS Clock and data throughput of up to 10.2 Gbps
- Automatic switching of HDMI and VGA inputs
- Manual switching of HDMI and VGA inputs via front panel button or RS-232
- HDMI and VGA scaling up to 4K Ultra HD 3840 x 2160 @ 30 Hz, 4:4:4)
- VGA Phase and Clock adjustments
- Extend HDMI, VGA with analog audio, and RS-232 over a single CAT-5e:
 - 4K Ultra HD (3840 x 2160 @ 30 Hz, 4:4:4), up to 130 ft/40 m, 8-bit color
 - 4K Cinema (DCI) (4096 x 2160 @ 30 Hz 4:4:4), up to 130 ft/40 m, 8-bit color
 - 1080p Full HD (60 Hz) or WUXGA (1920x1200 @ 60 Hz), up to 230 ft/70 m (up to 12-bit Deep Color)
- HDMI Features Supported:
 - HDMI 2.0
 - HDCP 2.2 and 1.4
 - 12-bit Deep Color (at 1080p)
 - LPCM 7.1, Dolby Atmos®, Dolby® TrueHD, DTS:X™, and DTS-HD Master Audio™ pass-through
 - 3DTV pass-through
 - CEC pass-through
 - Lip Sync pass-through
- Analog L/R audio input for VGA
- RS-232 control of switching, scaler, and EDID management functions
- Bi-Directional RS-232 extension when used with EXT-UHDA-HBTL-RX
- 2-way IR extension when used with EXT-UHDA-HBTL-RX
- Bi-Directional Power over HDBaseT™ (POH) provides power from the Sender to the Receiver or vice-versa, over the link cable. Only one side needs external power
- Uses Gefen's implementation of HDBaseT™ technology with enhanced features
- Advanced EDID Management for rapid integration of source and display
- Field-updateable firmware via USB Micro-B and RS-232 ports, using the Gefen Syner-G™ software
- Locking power connector
- Compact, ultra-low-profile enclosure is surface-mountable and can be hidden away

*Features and specifications are subject to change without notice.

All trademarks and registered trademarks are properties of their respective owners.

EXT-UHDA-HBTL-RX*

- Supports 340 MHz TMDS Clock and data throughput of up to 10.2 Gbps
- Extends HDMI, 2-way IR, and RS-232 over a single CAT-5e:
 - 4K Ultra HD (3840 x 2160 @ 60 Hz, 4:2:0), up to 130 ft/40 m (8-bit color)
 - 4K Ultra HD (3840 x 2160 @ 30 Hz, 4:4:4), up to 130 ft/40 m (8-bit color)
 - 4K Cinema-DCI (4096 x 2160 @ 24 or 30 Hz 4:4:4), up to 130 ft/40 m (8-bit color)
 - 1080p Full HD (60 Hz) or WUXGA (1920x1200 @ 60 Hz), up to 230 ft/70 m (up to 12-bit Deep Color)
- HDMI Features Supported:
 - HDMI 2.0
 - HDCP 2.2 and 1.4
 - 12-bit Deep Color (at 1080p)
 - LPCM 7.1, Dolby Atmos®, Dolby® TrueHD, DTS:X™, and DTS-HD Master Audio™ pass-through
 - 3DTV pass-through
 - CEC pass-through
 - Lip Sync pass-through
- RS-232 control of switching, scaler, and EDID management functions of a compatible Sender (such as EXT-UHDV-HBTL-TX or EXT-UHDV-WP-HBTL-TX)
- Bi-Directional RS-232 extension when used with a compatible Sender
- 2-way IR extension when used with EXT-UHDV-HBTL-TX
- Digital (optical and coaxial) and Analog audio breakout
- Bi-Directional Power over HDBaseT™ (POH) provides power to the Receiver or a compatible Sender unit over the link cable - only one side will need external power
- Uses Gefen's implementation of HDBaseT™ technology with enhanced features
- Locking power connector
- Compact, ultra-low-profile enclosure is surface-mountable and can be hidden away

*Features and specifications are subject to change without notice.

All trademarks and registered trademarks are properties of their respective owners.

EXT-UHDV-HBTLS-TX*

The following items are included in the EXT-UHDV-HBTLS-TX package. If any of these items are not present in the box when you first open it, please contact Gefen Technical Support as soon as possible.

- (1) 4K Ultra HD Multi-Format 2x1 HDBase™ Sender unit
- (1) 12V DC power supply with locking connector
- (1) 3-pin Phoenix plug (attached to unit)
- (2) Mounting Brackets
- (4) Self-adhesive rubber feet
- (1) Quick Start Guide

EXT-UHDA-HBTL-RX*

The following items are included in the EXT-UHDA-HBTL-RX. If any of these items are not present in the box when you first open it, please contact Gefen Technical Support as soon as possible.

- (1) 4K Ultra HD HDBase™ Receiver unit
- (1) 12V DC power supply with locking connector
- (1) 3-pin Phoenix plug (attached to unit)
- (2) Mounting Brackets
- (4) Self-adhesive rubber feet
- (1) Quick-Start Guide


*Features and specifications are subject to change without notice.

All trademarks and registered trademarks are properties of their respective owners.

Table of Contents

Controls, Connectors, and Indicators	11
EXT-UHDV-HBTLS-TX	11
EXT-UHDA-HBTL-RX.....	14
Installation	17
Physical Installation, EXT-UHDV-HBTLS-TX	17
Physical Installation, EXT-UHDA-HBTL-RX.....	17
Sample Wiring Diagram	18
LED Status	19
Scaler Functions and Picture Adjustments	20
EDID Management	21
OSD	22
OSD Buttons	22
OSD Operation	22
OSD Options	23
RS-232	29
Features	29
Commands	32
IR Control	34
Controlling the Source from the Viewing Location	34
Controlling the Display from the Source Location	35
Controlling the Source & Display from the Head-End and Viewing Locations	36
Firmware Update	37
Specifications	38

EXT-UHDV-HBTL5-TX

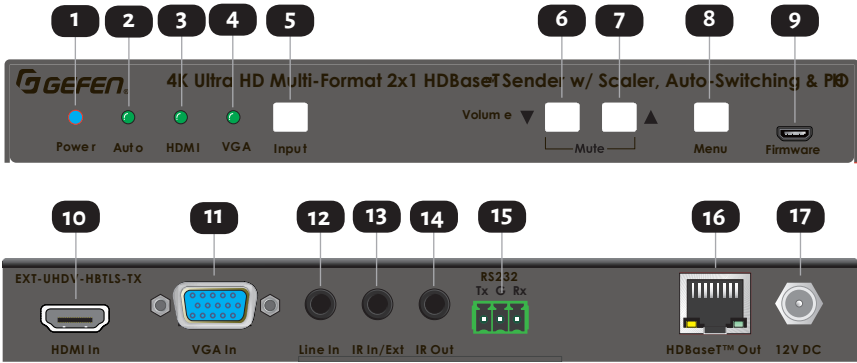


ID	Name	Description
1	Power Indicator	This LED indicator glows solid blue when the unit is powered. See LED Status (Page 19) for more information.
2	Auto Indicator	This LED glows solid green when Auto-Switching is active. See LED Status (Page 19) for more information.
3	HDMI Indicator	This LED indicator glows solid green when the HDMI input has been selected. See LED Status (Page 19) for more information.
4	VGA Indicator	This LED indicator glows solid green when the VGA input has been selected. See LED Status (Page 19) for more information.
5	Input/Auto Switch	To switch between HDMI and VGA inputs, press and release this button. To activate or deactivate Auto-Switching, press and hold this button for 3 seconds or longer until the function engages or disengages. The Auto LED (see 2 above) will be illuminated when Auto-Switching is active. See LED Status (Page 19) for more information.
6	Volume Down Button	Press and release this button to decrease audio output. Press both Volume Up and Volume Down buttons simultaneously to mute the audio. Press Volume Up or Volume Down buttons to unmute.

ID	Name	Description
7	Volume Up Button	Press and release this button to increase audio output. Press both Volume Up and Volume Down buttons simultaneously to mute the audio. Press Volume Up or Volume Down buttons to unmute.
8	Menu Button	Press and release the Menu button to enter and exit the On-Screen-Display (OSD).
9	Firmware Update Port	To do a firmware update, attach a USB thumb drive containing the new firmware to this port, using a USB Micro-B male to USB Type-A female cable or adaptor. The Gefen Syner-G™ software, running on a PC connected to the RS-232 port of the Sender unit (Page 28) will administer the firmware update process.
10	HDMI Input	Connect a Gefen HDMI cable from your source to this input.
11	VGA Input	Connect a VGA cable from your source to this input.
12	VGA Audio Input	Connect a 3.5mm stereo audio cable from the analog stereo audio output of your source to be used with the VGA input.
13	IR In/Ext	3.5mm mini-stereo jack. Connect an IR Extender (Gefen part no. EXT-RMT-EXTIRN) to this port. Alternatively, connect a 3.5mm mini-stereo connector from this port to the output of an automation system with an electrical IR output.
14	IR Out	Connect an EXT-IREMIT IR Emitter (1 pc included) from this port to the IR sensor of the device to be controlled.
15	RS-232 Port	This port can be used for extending 2-way RS-232 communications between the Sender and the Receiver, for remote control of the Sender, for Gefen Syner-G™ interface using an Rs-232 connection with a computer. Connect Tx, Rx, and Ground from an automation control device or an RS-232 device-to-be-controlled, using the removable 3-pin “Captive Screw” Phoenix connector.

ID	Name	Description
16	HDBaseT™ Link Connector	Connect a CAT-5e or better cable, up to the recommended length for a given resolution, from this port to the HDBaseT™ In port on the Receiver unit. This Sender can send power to and receive power from over the CAT-5 cable from EXT-UHDA-HBTL-RX or another POH-compatible Receiver.
17	12V DC In	This power receptacle is used to connect the included 12V DC power supply. When used with a POH-compliant Sender such as the EXT-UHDV-HBTL-TX, only one power supply is required for the extender system to operate.

EXT-UHDA-HBTL-RX

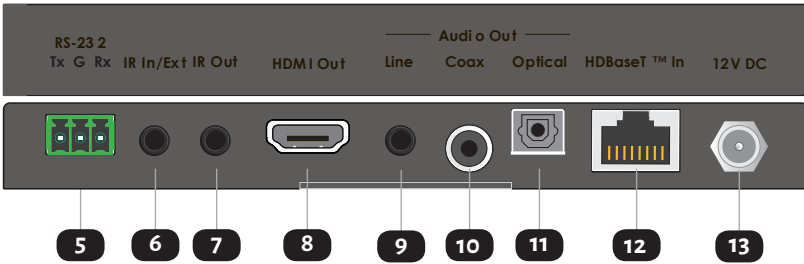

ID	Name	Description
1	RS-232/Program Switch	This 3-position slide switch places the unit in RS-232 extension or factory service modes (Prog 1 and Prog 2). During normal operation, this switch should be in RS-232 Pass-Thru position.
2	Link Indicator	This LED glows solid green when a link is established between the Sender and Receiver. See LED Status (Page 19) for more information.
3	HDCP Indicator	This LED indicator glows solid green when the active HDMI signal contains HDCP encryption. See LED Status (Page 19) for more information.
4	Power Indicator	This LED indicator glows solid blue when the unit is powered. See LED Status (Page 19) for more information.

ID	Name	Description
5	RS-232 Port	<p>This port can be used for extending 2-way RS-232 communications between the Sender and the Receiver, for remote control of the Sender, for Gefen Syner-G™ interface using an Rs-232 connection with a computer. Connect Tx, Rx, and Ground from an automation control device or an RS-232 device-to-be-controlled, using the removable 3-pin “Captive Screw” Phoenix connector. Please note that The Sender and Receiver's Tx, Rx, and Ground pin-outs for their Phoenix connectors are different. To ensure proper operation, please follow the pin-out of each connector as printed on each unit's enclosure.</p>
6	IR In/Ext	<p>3.5mm mini-stereo jack. Connect an IR Extender (Gefen part no. EXT-RMT-EXTIRN) to this port. Alternatively, connect a 3.5mm mini-stereo connector from this port to the output of an automation system with an electrical IR output.</p>
7	IR Out	<p>Connect an EXT-IREMIT IR Emitter (sold separately) from this port to the IR sensor of the device to be controlled.</p>
8	HDMI Out	<p>Use a Gefen HDMI cable to connect an HDMI display to this port.</p>
9	Line Out	<p>This port provides analog Left and Right channels of audio de-embedded from the HDMI signal, for use with outboard amplification. Connect a 3.5mm stereo audio cable from this port to the analog stereo input of your amplifier or processor.</p>

ID	Name	Description
10	Coaxial Digital Out	This port provides up to 5.1 channels of Bitstream (Dolby Digital or DTS), or Left and Right channels of PCM digital audio de-embedded from the HDMI signal, for use with outboard amplification. Connect a coaxial digital audio cable with RCA connectors from this port to the coaxial digital input of your amplifier or processor.
11	Optical Digital Out	This port provides up to 5.1 channels of Bitstream (Dolby Digital or DTS), or Left and Right channels of PCM digital audio de-embedded from the HDMI signal, for use with outboard amplification. Connect an optical digital audio cable with TOSLINK® connectors from this port to the optical digital input of your amplifier or processor.
12	HDBaseT™ In (Link) Connector	Connect a CAT-5e or better cable, up to the recommended length for a given resolution, from this port to the HDBaseT™ Out port on the Sender unit. This Receiver can send power over the CAT-5 cable to a POH compliant Sender unit. It can also receive power over the CAT-5 cable from a POH compatible Sender such as the EXT-UHDV-HBTLs-TX, but NOT the EXT-UHDV-WP-HBTLs-TX.
13	12V DC In	This power receptacle is used to connect the included 12V DC power supply. As long as the connected Sender is POH-compliant, only one power supply is required for the extender system to operate.

Physical Installation


EXT-UHDA-HBTLA-TX:

1. The Sender's ultra-low-profile enclosure can be surface-mounted using a pair of mounting brackets that can be attached to each side of the enclosure using the provided screws. It can also be placed on a shelf.
2. When surface-mounting the Sender, please secure it to the mounting surface using screws appropriate for that specific surface (not included with the product).

EXT-UHDA-HBTL-RX:

1. The Receiver's ultra-low-profile enclosure can be hidden behind the display. It also features a pair of mounting brackets that can be attached to each side of the enclosure using the provided screws.
2. When surface-mounting the Receiver, please secure it to the mounting surface using screws appropriate for that specific surface (not included with the product).

Sample Wiring Diagram

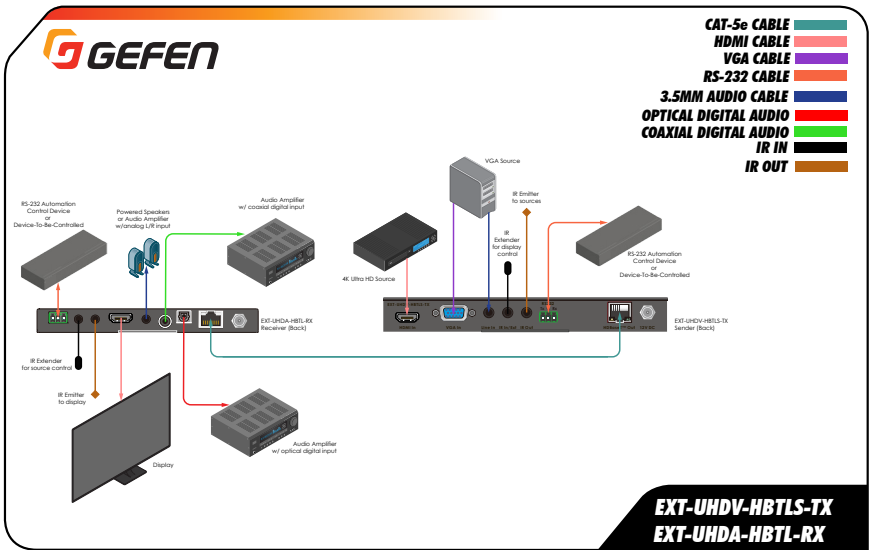





Notes



1. The wiring diagram above shows cables and accessories that may not be included with the products. Select accessories (as identified by Gefen part numbers) are available for purchase from your Gefen distributor.
2. Power supply connections are not shown in the diagrams above.



LED Status



The **Power**, **Auto**, **HDMI**, and **VGA** indicators on the Sender, and **Power**, **Link**, and **HDCP** indicators on the Receiver unit provide basic information on the current status of each unit.



Power		Description
Solid blue		<ul style="list-style-type: none">The unit is powered.
Off		<ul style="list-style-type: none">The unit is not powered. Check the power supply and the Link connection between the Sender and the Receiver unit.

Link (Receiver only)		Description
Solid green		<ul style="list-style-type: none">Link integrity is good between the Sender and Receiver unit.
Off		<ul style="list-style-type: none">Link is not detected. Check the power supply and the Link connection between the Sender and the Receiver unit.

HDCP (Receiver only)		Description
Solid green		<ul style="list-style-type: none">The HDMI signal being extended between Sender and Receiver has HDCP Encryption.
Off		<ul style="list-style-type: none">Either the VGA or an unencrypted HDMI signal is being extended.

HDMI (Sender only)		Description
Solid green		<ul style="list-style-type: none">HDMI Input is selected.
Off		<ul style="list-style-type: none">VGA input is selected.

VGA (Sender only)		Description
Solid green		<ul style="list-style-type: none">VGA Input is selected.
Off		<ul style="list-style-type: none">HDMI input is selected.

Auto* (Sender only)		Description
Solid green		<ul style="list-style-type: none">Automatic Input Switching is active.
Off		<ul style="list-style-type: none">Automatic Input Switching is off.

* To Enable/Disable Auto-Switching, press and hold the Input/Auto Button for 3 seconds or longer until the backlight turns on or off.

Scaler Functions and Picture Adjustments

The EXT-UHDV-HBTLS-TX features a powerful Scaler that is always active for both HDMI and VGA inputs. The input signal can be scaled to an array of resolutions, timing, and aspect ratio up to 4K Ultra HD (3840 x 2160) at 30 Hz, 4:4:4.

Output aspect ratio automatically follows the source to maintain the best possible picture at all times.

Scaler Output can be set to one of the following:

- 1 - 1024x768 60 Hz
- 2 - 1280x720 50 Hz
- 3 - 1280x720 60 Hz
- 4 - 1360x768 60 Hz
- 5 - 1920x1080 50 Hz
- 6 - 1920x1080 60 Hz
- 7 - 3840x2160 30 Hz

The EXT-UHDV-HBTLS-TX also features VGA Clock and Phase adjustments.

All of the above scaler and picture adjustment parameters can be configured via RS-232 commands ([Page 26](#)) or Gefen Syner-G™ software.

EDID Management

The EXT-UHDV-HBTL5-TX also features advanced EDID Management capabilities for quick optimization of a source's output to best match the display's capabilities.

EDID Management can be done via RS-232 commands ([Page 26](#)) or using the Gefen Syner-G™ software.

When using Gefen Syner-G™, Internal, External, and Custom EDIDs can be downloaded from the EXT-UHDV-HBTL5-TX, modified via the advanced EDID Editor that is built into the Gefen Syner-G™ software, and uploaded back into the Sender.

The EXT-UHDV-HBTL5-TX features an On-Screen Display (OSD) that can be used to configure options.

Use the front panel buttons on the EXT-UHDV-HBTL5-TX to activate/deactivate the OSD, navigate, and select options.

OSD Buttons:




ID	Name
1	Down (▼) Button
2	UP (▲) Button
3	Menu Button

OSD Operation:

- *OSD Activation:* Press and release the **MENU** button on the front panel
- *OSD Deactivation:* The OSD will automatically deactivate if an input command (Menu, ▲ or ▼) has not been detected in 5 seconds. This time-out is not adjustable.
- *Navigation:* Use the ▲ button on the front panel to navigate to the option directly above the currently highlighted menu option. Conversely, use the ▼ button to navigate to the option directly below the currently highlighted menu option.
- *Select:* Press and release the **MENU** button while the OSD is activated to navigate to the next menu layer or to select the currently highlighted option.

OSD Options

Main Menu

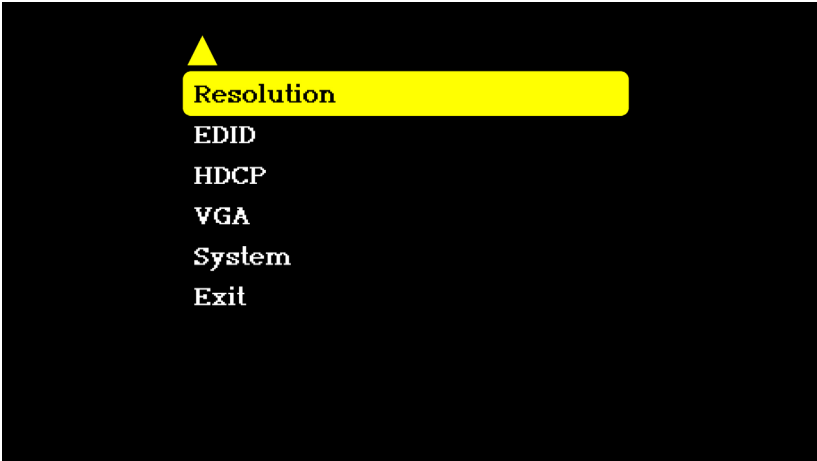

Resolution - Manage the built-in scaler's output resolution. This option affects both the HDMI and VGA inputs.

EDID: Manage the EDID that is used with the HDMI input.

HDCP: Manage HDCP functions.

VGA: Manage VGA options, including the Auto-Sync feature.

System: Manage System options, such as Factory Default and RS-232 Baud Rate.

Exit: Leave the OSD.

Resolution Menu

Sets the output resolution for both the HDMI and VGA inputs. The following options are available:

3840x2160 30 Hz
1920x1080 60 Hz
1920x1080 50 Hz
1280x720 60 Hz
1280x720 50 Hz
1360x768 60 Hz
1024x768 60 Hz

Note: The signal from 4K (3840 x 2160) Ultra HD sources that operate at 60 Hz will automatically be converted to 3840 x 2160 30 Hz.

Back: Go back to the previous layer of the OSD.

EDID Menu



Sets the EDID that will be used with the HDMI input.

Selecting an EDID will aid in forcing a particular resolution/timing and audio format.

The following EDID options are available:

1080P 2CH: EDID with various CEA and VESA timings and a preferred timing of 1920x1080 60 Hz, progressive. Audio support is limited to 2 channels of LPCM (Front Left and Front Right channels), which is the maximum number of audio channels supported by this product.

4K UHD 300 MHz 2CH: EDID with various CEA and VESA timings and a preferred timing of 3840x2160 30 Hz, progressive. Audio support is limited to 2 channels of LPCM (Front Left and Front Right channels), which is the maximum number of audio channels supported by this product.


External: EDID that is transferred from the display/device connected to the Receiver at the remote location. Note that some resolutions/timings and audio formats that are available on the display/device connected to the Receiver may not be compatible with this product.

Custom: This EDID is user-managed and uploaded/managed from the Gefen Syner-G™ software. Note that some resolutions/timings and audio formats that are present in a user EDID may not be compatible with this product.

Back: Go back to the previous layer of the OSD.

Note: The VGA EDID is fixed and includes a number of standard VESA timings that are

HDCP Menu

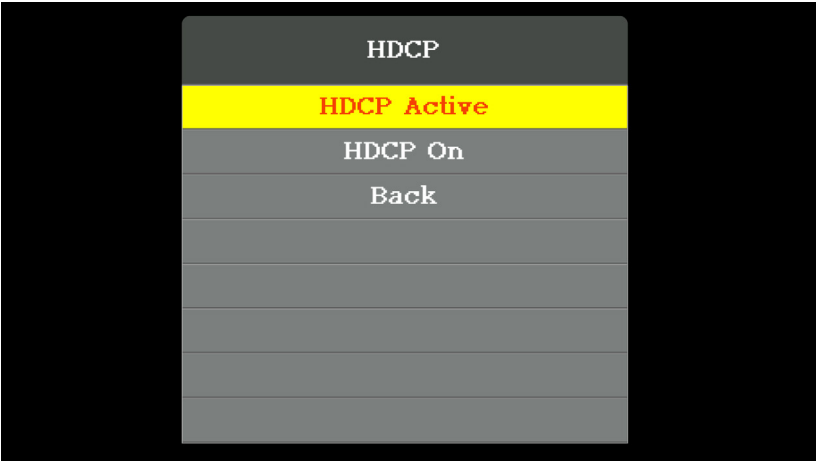

Sets the HDCP operating mode for the HDMI input. The following HDCP operating modes are available:

HDCP Active: This HDCP operating mode will follow the detected HDMI input's HDCP encryption level, if present. Acceptable HDCP encryption levels include HDCP 2.2 and HDCP 1.4. If the connected HDMI source is unencrypted, HDCP encryption will not be enforced on the Receiver's HDMI output.

HDCP On: A minimum of HDCP 1.4 encryption will always be enforced on the Receiver's HDMI output, regardless of whether the input is encrypted or not. If HDCP encryption is detected on the HDMI input device, the same level of encryption will be active and enforced on the Receiver's HDMI output.

Back: Go back to the previous layer of the OSD.

Note: HDCP 1.4 will also be active on the Receiver's output if the VGA input is active and the HDCP operating mode is set to "HDCP On".

VGA Menu



The VGA menu is used to adjust options that relate to the VGA input. The following options are available:

Auto-Sync: Enable and Disable the Auto-Sync feature. When this option is enabled, an Auto-Sync function will be performed when a VGA input is connected or the VGA input has been selected.

Perform Auto-Sync: This option performs a manual Auto-Sync function on demand. This can be used regardless of whether the Auto-Sync feature is Enabled or Disabled.

VGA Phase: This option can be used regardless of whether Auto-Sync is Enabled or Disabled. It is used to fine-tune the output image if the Auto-Sync function does not produce a perfectly clear image.

Back: Go back to the previous layer of the OSD.

System Menu

The System menu is used to modify options that relate to operational functions on the EXT-UHDV-HBTLS-TX. The following options are available:

RS-232 Baud Rate: Sets the operating baud rate for the RS-232 serial interface. The following options are available:

- 115200
- 57600
- 38400
- 19200
- 9600
- 4800
- 2400

Factory Default: Use this option to return the unit to factory default settings.

Firmware Version: Displays the current firmware version that is installed on the EXT-UHDV-HBTLS-TX.

Back: Go back to the previous layer of the OSD.

RS-232 Features

The EXT-UHDV-HBTLS-TX & EXT-UHDA-HBTL-RX, when used together, support the following RS-232-related functions:

- a. Bi-directional RS-232 extension between Sender and Receiver.
- b. Control of Sender's input switching, scaler functions, and EDID mangement from the viewing side, via the Receiver's RS-232 port. This can be done via an automation control device or the Gefen Syner-G™ software.
- c. Gefen Syner-G™ interface via RS-232 ports of Sender and Receiver. Gefen Syner-G™ software is used for firmware updates and EDID management of the Sender.

Please see the RS-232 commands section ([Page 26](#)) on how to configure the Sender and Receiver to perform the above functions.

a. Bi-directional RS-232 extension between Sender and Receiver:

1. Connect RS-232 Tx, Rx, and Ground from an automation control device to the removable 3-pin "Captive Screw" Phoenix connector that is attached to the **RS-232** port of the Sender unit. Each of the 3 pins is identified on the connector panel.
2. Make sure that the 3 position slide switch on the front panel of the Receiver is set to **RS-232 Pass-Thru** mode. Connect RS-232 Tx, Rx, and Ground from the device-to-be-controlled, to the removable 3-pin "Captive Screw" Phoenix connector that is attached to the **RS-232** port of the Receiver unit. Each of the 3 pins is identified on the top panel, near the connector.
3. Since RS-232 is a bi-directional communications protocol, you can also connect the automation controller to the receiver and the device-to-be-controlled to the sender, depending on your application.

b. Control of Sender's input switching, scaler functions, and EDID mangement from the viewing side, via the Receiver's RS-232 port:

1. Connect RS-232 Tx, Rx, and Ground from a computer with a Serial (RS-232) port, or using a USB-to-RS-232 adapator, to the removable 3-pin "Captive Screw" Phoenix connector that is attached to the **RS-232** port of the Sender unit. Each of the 3 pins is identified on the connector panel.
2. Establish Serial (RS-232) communications between the computer and the Sender unit. Send the **#SET_RS232_MODE 2** command to the Sender to place it in "Remote-End-Control" mode. To revert the Sender to its default RS-232 extension mode, the RS-232 command **#SET_RS232_MODE 1** needs to be sent from the Receiver.
3. Disconnect the PC from the Sender unit. Wire the Sender unit as needed and install it in its location.
4. Make sure that the 3 position slide switch on the front panel of the Receiver is set to **RS-232 Pass-Thru** mode. Connect RS-232 Tx, Rx, and Ground from an automation control device to the removable 3-pin "Captive Screw" Phoenix connector that is attached to the **RS-232** port of the Receiver unit. Each of the 3 pins is identified on the top panel, near the connector.
5. Program your automation control devcive with the RS-232 control commands ([Page 26](#)) for the EXT-UHDV-HBTL5-TX. All commands sent to the RS-232 port of the Receiver unit will be extended to the Sender unit via the HDBaseT™ Link cable.

c. Interface with Gefen Syner-G™ via RS-232 ports of Sender and Receiver.:

1. **Direct interface with the Sender:** Connect RS-232 Tx, Rx, and Ground from a computer with a Serial (RS-232 port), or using a USB-to-RS-232 adaptor, to the removable 3-pin “Captive Screw” Phoenix connector that is attached to the **RS-232** port of the Sender unit. Each of the 3 pins is identified on the connector panel. **If the Sender was configured to be in “Remote-End-Control” mode (see section (b) on previous page), return it to its default mode by following step (2) of section (b).**
2. **Direct interface with the Receiver:** Since the Receiver does not have any customizable features, it cannot be used with Gefen Syner-G™.
3. **Interface with the Sender by connecting through the Receiver:**
 - i. Place the Sender unit in “Remote-End-Control” mode (see section (b) on previous page for details). Wire the Sender unit as needed and install it in its location.
 - ii. Make sure that the 3 position slide switch on the front panel of the Receiver is set to **RS-232 Pass-Thru** mode.
 - iii. Connect RS-232 Tx, Rx, and Ground from a computer with a Serial (RS-232 port), or using a USB-to-RS-232 adaptor, to the removable 3-pin “Captive Screw” Phoenix connector that is attached to the **RS-232** port of the Receiver unit.


RS-232 Commands (EXT-UHDV-HBTL5-TX)

Command Code	Description	Syntax
Help		
#HELP	LISTS ALL AVAILABLE TCP/UDP COMMANDS. IF A COMMAND IS SPECIFIED THEN BOTH THE DESCRIPTION AND SYNTAX WILL BE LISTED FOR THE COMMAND	#HELP PARAM1 (OPTIONAL) PARAM1 = ANY TCP/UDP COMMAND (NO #)
Power		
#POWER	ENABLE/DISABLE STANDBY MODE	#POWER PARAM1 PARAM1 = 0 - 1 0 - OFF 1 - ON
#GET_POWER	GET CURRENT STANDBY STATE	#GET_POWER
Volume		
#SET_VOL	SET VOLUME ADJUSTMENT FOR BOTH ANALOG AND DIGITAL AUDIO SOURCES	#SET_VOL PARAM1 (PARAM2 OPTIONAL PARAMETER WHEN USING '+' OR '-' TO INCREASE OR DECREASE VOLUME BY VALUE) PARAM1 = 0 - 100, +, - 0 = 100 - VOLUME LEVEL + - INCREASE VOLUME - - DECREASE VOLUME PARAM2 = 0 - 100 (VOLUME INCREASE/DECREASE VALUE)
#GET_VOL	GET VOLUME LEVEL	#GET_VOL
#SET_MUTE	SET AUDIO MUTE FOR ALL AUDIO SOURCES	#SET_MUTE PARAM1 PARAM1 = 0 - 1 0 - UNMUTE 1 - MUTE
#GET_MUTE	GET AUDIO MUTE STATUS	#GET_MUTE
Routing		
V	CHANGE VIDEO INPUT BETWEEN HDMI AND VGA	V PARAM1 PARAM1 = V, H, T V - VGA H - HDMI T - TOGGLE
S	GET SELECTED INPUT STATUS	S NO PARAMETER
#SET_AUTO_SWITCH	ENABLE/DISABLE AUTO-SWITCHING FEATURE	#SET_AUTO_SWITCH PARAM1 PARAM1 = 0 - 1 0 - DISABLED 1 - ENABLED
#GET_AUTO_SWITCH	GET THE ENABLE/DISABLE STATUS OF THE AUTO-SWITCHING FEATURE	#GET_AUTO_SWITCH
Manage EDID		
#SET_EDID_MODE	SET INPUT EDID MODE	#SET_EDID_MODE PARAM1 PARAM1 = 1 - 4 1 - INTERNAL - 1080P 2 CH 2 - INTERNAL - 4K UHD 300 MHZ 2 CH 3 - EXTERNAL (BYPASS MODE) 4 - CUSTOM MODE - USER
#GET_EDID_MODE	GET INPUT EDID MODE	#GET_EDID_MODE
#GET_INTERNAL_EDID	DOWNLOAD A PRESET INTERNAL EDID	#GET_INTERNAL_EDID PARAM1 PARAM1 = 1 - 2 1 = INTERNAL - 1080P 2 CH 2 = INTERNAL - 4K UHD 300 MHZ 2 CH
#GET_EXTERNAL_EDID	DOWNLOAD EXTERNAL (BYPASS) EDID	#GET_EXTERNAL_EDID
#GET_CUSTOM_EDID	DOWNLOAD THE CUSTOM USER EDID	#GET_CUSTOM_EDID
#SEND_CUSTOM_EDID	UPLOAD A CUSTOM USER EDID FOR USE WITH CUSTOM MODE	#SEND_CUSTOM_EDID
#SET_EDID_LOCK	SET INPUT EDID LOCK (PREVENTS ACCIDENTAL CUSTOM EDID OVERWRITE AND VALID ONLY WHEN EDID MODE IS SET TO CUSTOM MODE)	#SET_EDID_LOCK PARAM1 PARAM1 = 0 - 1 0 - DISABLED 1 - ENABLED
#GET_EDID_LOCK	GET INPUT EDID LOCK STATUS	#GET_EDID_LOCK

Command Code	Description	Syntax
Setup		
#AUTO_SYNC	INITIATE VGA AUTO-SYNC FEATURE	#AUTO_SYNC
#SET_AUTO_SYNC	ENABLE/DISABLE VGA AUTO-SYNC FEATURE	#SET_AUTO_SYNC PARAM1 PARAM1 = 0 - 1 0 - DISABLE 1 - ENABLE
#GET_AUTO_SYNC	GET VGA AUTO-SYNC ADJUSTMENT VALUE	#GET_AUTO_SYNC
#SET_PHASE	SET VGA PHASE ADJUSTMENT	#SET_PHASE PARAM1 PARAM1 = 0 - 100, -, + 0 - 100 - PHASE VALUE - - DECREASE PHASE BY ONE STEP + - INCREASE PHASE BY ONE STEP
#GET_PHASE	GET VGA PHASE ADJUSTMENT VALUE	#GET_PHASE
#SET_CLOCK	SET VGA CLOCK ADJUSTMENT	#SET_CLOCK PARAM1 PARAM1 = 0 - 100, -, + 0 - 100 - CLOCK VALUE - - DECREASE CLOCK BY ONE STEP + - INCREASE CLOCK BY ONE STEP
#GET_CLOCK	GET VGA CLOCK ADJUSTMENT VALUE	#GET_CLOCK
#SET_RS232_MODE	SET THE RS-232 OPERATING MODE BETWEEN PASS-THROUGH AND REMOTE CONTROL	#SET_RS232_MODE PARAM1 PARAM1 = 1, 2 1 - RS-232 PASS-THROUGH AND FEATURE CONTROL FROM SENDER SIDE 2 - FEATURE CONTROL FROM RECEIVER SIDE
#GET_RS232_MODE	GET THE RS-232 OPERATING MODE BETWEEN PASS-THROUGH AND EXTENDED CONTROL	#GET_RS232_MODE
#SET_RS232_BAUD	SET THE RS-232 COMMUNICATION BAUD RATE	#SET_RS232_BAUD PARAM1 PARAM1 = 0 - 6 0 - 115200 1 - 57600 2 - 38400 3 - 19200 4 - 9600 5 - 4800 6 - 2400
#GET_RS232_BAUD	GET THE RS-232 COMMUNICATION BAUD RATE	#GET_RS232_BAUD
#SET_OUTPUT_RES	SET OUTPUT RESOLUTION	#SET_OUTPUT_RES PARAM1 PARAM1 = 1 - 7 1 - 1024x768 60 HZ 2 - 1280x720 50 HZ 3 - 1280x720 60 HZ 4 - 1360x768 60 HZ 5 - 1920x1080 50 HZ 6 - 1920x1080 60 HZ 7 - 3840x2160 30 HZ
#GET_OUTPUT_RES	GET THE OUTPUT RESOLUTION STATUS	#GET_OUTPUT_RES
#SET_INPUT_HDCP	SET HDMI INPUT HDCP OPERATING MODE	#SET_INPUT_HDCP PARAM1 PARAM1 = 1 - 2 1 - ACTIVE (HDCP PASS-THROUGH) 2 - ON (ALWAYS ENCRYPT WITH HDCP 1.4)
#GET_INPUT_HDCP	GET HDMI INPUT HDCP OPERATING MODE	#GET_INPUT_HDCP
System Settings		
#FIRMWARE_UPDATE	PERFORM FIRMWARE UPDATE	#FIRMWARE_UPDATE
#GET_FIRMWARE_VERSION	GET FIRMWARE VERSION	#GET_FIRMWARE_VERSION
#FACTORY_RESET	RESET TO FACTORY DEFAULTS	#FACTORY_RESET
#REBOOT	REBOOT THE UNIT	#REBOOT


Controlling the Source from the Viewing Location

1. Connect an EXT-RMT-EXTIRN IR Extender (sold separately) to the **IR In/Ext** port on the Receiver unit. If using an automation system, connect the 3.5mm mini-stereo connector from the **IR In/Ext** port on the Receiver unit to the IR Output port of the automation system. IR signals will be transmitted over the Link cable.
2. Connect an EXT-IREMIT IR Emitter (sold separately) from the **IR Out** port of the Sender unit, to the IR sensor window on the source device.

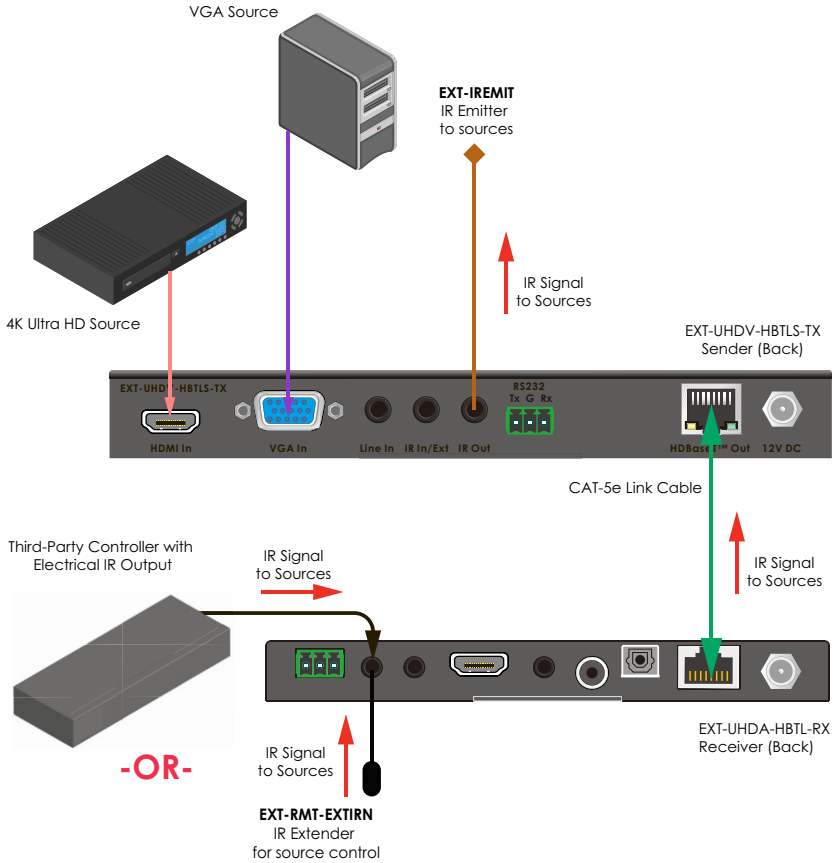


Controlling the Display from the Source Location

1. Connect an EXT-RMT-EXTIRN IR Extender (sold separately) to the IR In/Ext port on the Sender unit. If using an automation system, connect the 3.5mm mini-stereo connector from the **IR In/Ext** port on the Receiver unit to the IR Output of the automation system. IR signals will be transmitted over the Link cable.
2. Connect an EXT-IREMIT IR Emitter (sold separately) from the **IR Out** port on the Receiver unit to the IR sensor on the display.

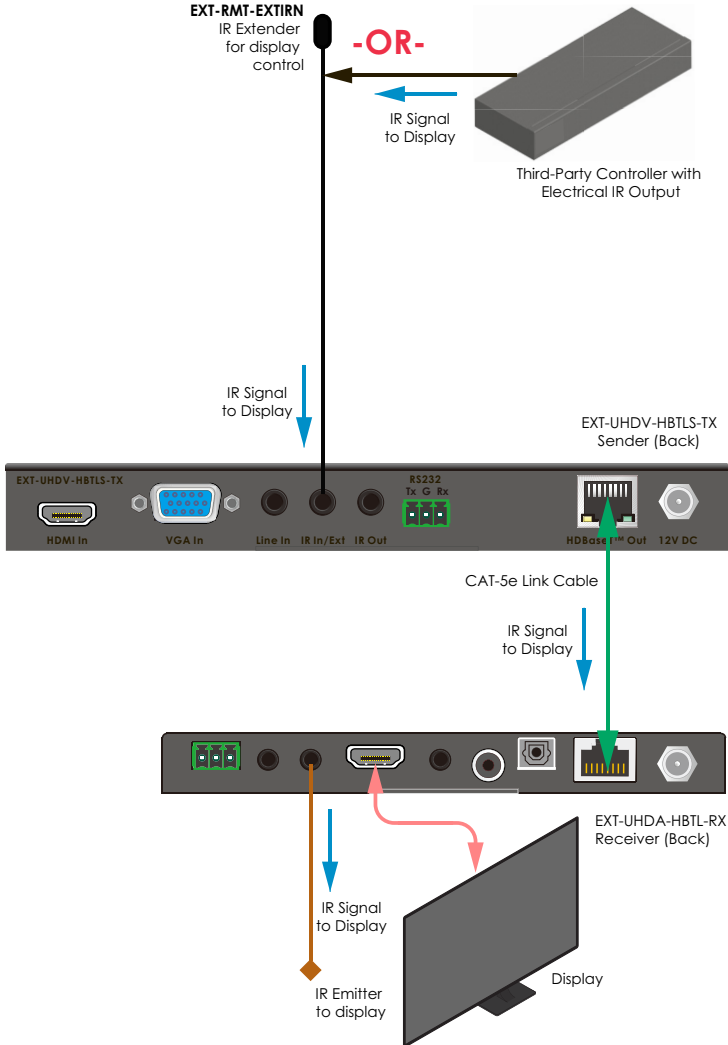

Controlling the Source & Display from the Head-End and Viewing Locations

1. This set-up will require an additional EXT-RMT-EXTIRN and EXT-IREMIT, sold separately by your Gefen distributor.
2. Follow instructions on [page 26](#) and [27](#).

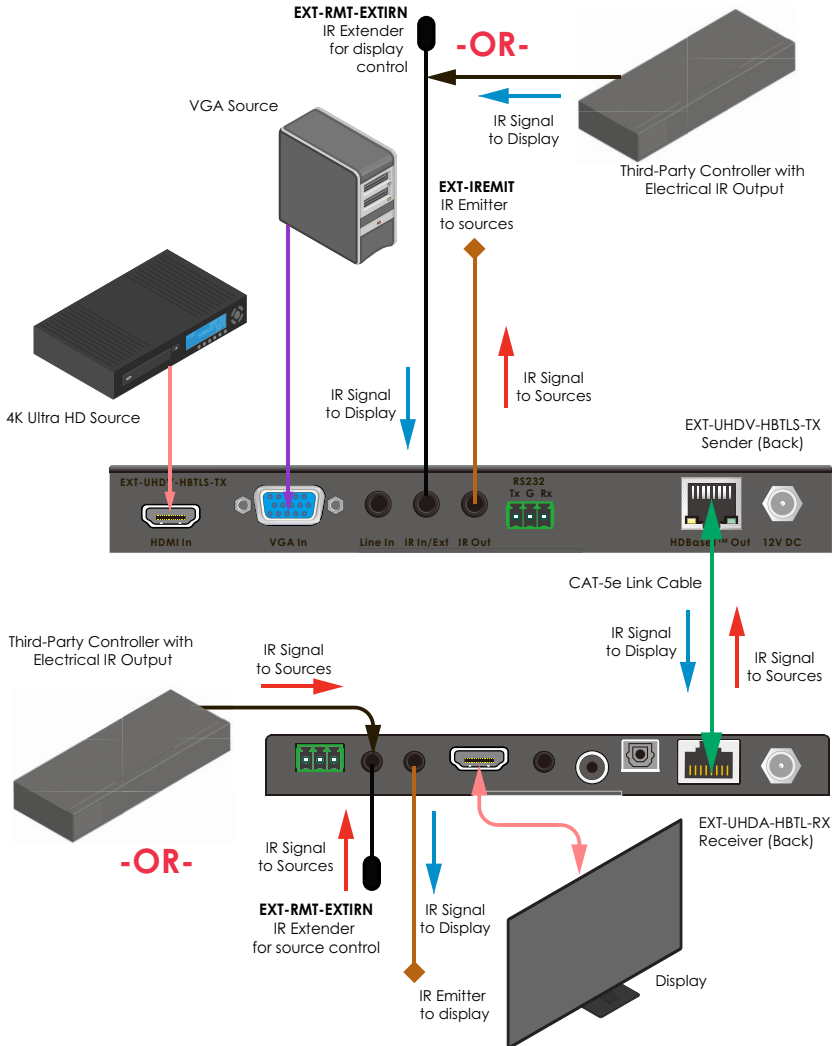

Firmware Update

1. Over time, the Sender unit may require a firmware update to add functionality or fix issues.
2. To perform a firmware update, a Windows PC that is running the Gefen Syner-G™ software needs to be connected to the **RS-232** port of the Sender. Use direct RS-232 connection if your PC has a serial port. If not, use a USB-to-RS-232 adaptor.
3. To update the Sender unit, the Gefen Syner-G™ software will send the necessary commands to place the product in firmware update mode. The firmware will be loaded into the Sender from a USB thumb drive, connected to the Micro-USB **Firmware** port on the Sender's front panel via a USB-Micro-B-male-to-USB-Type-A-female cable or adaptor (available from major electronics stores).
4. Follow on-screen instructions in Gefen Syner-G™ to perform the firmware update.
5. Once a unit has successfully been updated, cycle the power by removing power from the Sender unit, wait for the Power LED to deactivate, and then reconnect the power supply.

EXT-UHDV-HBTLS-TX

Supported Formats	
HDMI Input Maximum Video Resolution/Timing	<ul style="list-style-type: none"> 4K Cinema - DCI (4096 x 2160 to 60Hz, 4:4:4) 4K Ultra HD (3840 x 2160 to 60Hz, 4:4:4)
VGA Input Maximum Video Resolution/Timing	<ul style="list-style-type: none"> WUXGA (1920x1200 to 60 Hz 4:4:4)
HDBaseT Extension Maximum Video Resolution/Timing	<ul style="list-style-type: none"> 4K Ultra HD (3840 x 2160 at 30Hz, 4:4:4)
Audio (HDMI Pass-Thru)	<ul style="list-style-type: none"> Up to 8 channels of HBR, Bitstream, & LPCM
HDCP	<ul style="list-style-type: none"> 2.2 and 1.4
Connectors & Indicators	
Video Input Connectors	<ul style="list-style-type: none"> 1 x HDMI Type A 19-pin, female 1 x VGA HD-15, female
L/R Analog VGA Audio Input Connector	<ul style="list-style-type: none"> 1 x 3.5mm mini-stereo jack
HDBaseT™ Link Connector	<ul style="list-style-type: none"> 1 x RJ-45, shielded
Firmware Update Connector	<ul style="list-style-type: none"> 1 x USB Micro-B, female
RS-232 Connector	<ul style="list-style-type: none"> 1 x 3-pin Phoenix
IR Extender Type	<ul style="list-style-type: none"> EXT-RMT-EXTIRN
IR In/Ext Connector	<ul style="list-style-type: none"> 1 x 3.5mm mini-stereo, female
IR Out Connector	<ul style="list-style-type: none"> 1 x 3.5mm mini-stereo, female
Power Connector	<ul style="list-style-type: none"> 1 x 12V DC, locking, 5.5mm barrel/2.1mm pin
Auto-Manual Switch	<ul style="list-style-type: none"> 1 x tact-type
Power Indicator	<ul style="list-style-type: none"> 1 x LED, blue
Auto (Switching) Indicator	<ul style="list-style-type: none"> 1 x LED, green
HDMI Indicator	<ul style="list-style-type: none"> 1 x LED, green
VGA Indicator	<ul style="list-style-type: none"> 1 x LED, green
Operational	
HDMI Input TMDS Clock/Video Bandwidth	<ul style="list-style-type: none"> 600 MHz/18 Gbps
Extension TMDS Clock/Video Bandwidth	<ul style="list-style-type: none"> 340 MHz/10.2 Gbps
Power Consumption	<ul style="list-style-type: none"> Not powering a Receiver: 9W maximum Powering a Receiver: 22W maximum
Operating Temperature	<ul style="list-style-type: none"> +32 to +122 °F (0 to +50 °C)
Operating Humidity	<ul style="list-style-type: none"> 5% to 90% RH, non-condensing
Storage Temperature	<ul style="list-style-type: none"> -4 to +185 °F (-20 to +85 °C)
Storage Humidity (RH)	<ul style="list-style-type: none"> 0% to 95% RH, non-condensing
MTBF	<ul style="list-style-type: none"> 50000 hours

Physical	
Dimensions (W x H x D, not including connectors)	Not including mounting brackets: · 7.7" x 0.93" x 4" (195mm x 24 x 100mm) Including mounting brackets: · 8.7" x 0.93" x 4" (221mm x 24 x 100mm)
Net Weight	· 0.8 lbs (0.35 kg)

* Features and specifications are subject to change without notice.
All trademarks and registered trademarks are properties of their respective owners.
Copyright© 2018 Nortek Security & Control, LLC

EXT-UHDA-HBTL-RX

Supported Formats	
Maximum Video Output Resolution/Timing	Overall Capability: <ul style="list-style-type: none"> 4K Cinema - DCI (4096 x 2160 to 60Hz, 4:2:0) 4K Ultra HD (3840 x 2160 to 60Hz, 4:2:0) When used with EXT-UHDV-HBTL-TX: <ul style="list-style-type: none"> 4K Ultra HD (3840 x 2160 at 30Hz, 4:4:4)
Audio (HDMI Pass-Thru)	<ul style="list-style-type: none"> Up to 8 channels of HBR, Bitstream, & LPCM
Audio (De-Embedded)	<ul style="list-style-type: none"> Up to 6 channels of Bitstream, or 2 channels of LPCM
HDCP	<ul style="list-style-type: none"> 2.2 and 1.4
Connectors & Indicators	
Video Output Connector	<ul style="list-style-type: none"> 1 x HDMI Type A 19-pin, female
De-Embedded Audio Output Ports	<ul style="list-style-type: none"> L/R Analog: 1 x 3.5mm mini-stereo jack Coaxial Digital: 1 x RCA, female Optical Digital: 1 x TosLINK®
HDBaseT™ Link Connector	<ul style="list-style-type: none"> 1 x RJ-45, shielded
RS-232 Connector	<ul style="list-style-type: none"> 1 x 3-pin Phoenix
Firmware Update Connector	<ul style="list-style-type: none"> 1 x USB Micro-B, female
IR Extender Type	<ul style="list-style-type: none"> EXT-RMT-EXTIRN
IR In/Ext Connector	<ul style="list-style-type: none"> 1 x 3.5mm mini-stereo, female
IR Out Connector	<ul style="list-style-type: none"> 1 x 3.5mm mini-stereo, female
Power Connector	<ul style="list-style-type: none"> 1 x 12V DC, locking, 5.5mm barrel/2.1mm pin
RS-232/Program Switch	<ul style="list-style-type: none"> 1 x 3-position, slide-type
Power Indicator	<ul style="list-style-type: none"> 1 x LED, blue
Link Indicator	<ul style="list-style-type: none"> 1 x LED, green
HDCP Indicator	<ul style="list-style-type: none"> 1 x LED, green
Operational	
TMDS Clock	<ul style="list-style-type: none"> 340 MHz
Video Bandwidth	<ul style="list-style-type: none"> 10.2 Gbps
Power Consumption	<ul style="list-style-type: none"> Not powering a Sender: 9W maximum Powering a Sender: 22W maximum
Operating Temperature	<ul style="list-style-type: none"> +32 to +122 °F (0 to +50 °C)
Operating Humidity	<ul style="list-style-type: none"> 5% to 90% RH, non-condensing
Storage Temperature	<ul style="list-style-type: none"> -4 to +185 °F (-20 to +85 °C)
Storage Humidity (RH)	<ul style="list-style-type: none"> 0% to 95% RH, non-condensing
MTBF	<ul style="list-style-type: none"> 50000 hours

Physical	
Dimensions (W x H x D, not including connectors)	Not including mounting brackets: · 6" x 0.65" x 4" (152mm x 17 x 100mm) Including mounting brackets: · 7" x 0.65" x 4" (178mm x 17 x 100mm)
Net Weight	· 0.6 lbs. (0.27 kg)

* Features and specifications are subject to change without notice.
All trademarks and registered trademarks are properties of their respective owners.
Copyright© 2018 Nortek Security & Control, LLC



5919 Sea Otter Place, Suite 100 , Carlsbad, CA 92010, USA
1800 S McDowell Blvd, Petaluma, CA 94954, USA
1-707-283-5900 1-800-472-5555

Copyright© 2018 Nortek Security & Control, LLC

Part Number: MAN-EXT-UHDV-HBTL5 Version A2